Front Face Light Kit Installation Instructions

Model:

fireplace flames.

AVFL42RLK for use on AVFL42 Gas Fireplaces

The Front Face Light Kit is designed for use on the AVFL42 model fireplace and provides indirect lighting framing the

NOTE: The Front Face Light Kit requires installation of the Face Kit AVFL42WCSS or AVFL42WFBT and is assembled at the same time as the Face Kit.

NOTE: If the Face Kit, AVFL42WCSS or AVFL42WFBT has already been installed on the fireplace, it would be easiest to remove the face, disassemble all parts and follow these instructions.

Read these instructions thoroughly before beginning installation.

CAUTION: Allow fireplace to cool completely if it has been in operation.

Kit contents:


- 2, Brackets, Rope Light Top/Bottom
- 2, Brackets, Rope Light Side
- 1, Rope Light
- 22, Clips

12, #8 x 3/8" Truss Head Screws

Tools required: Screwdriver


Installation Instructions

- 1. Arrange face parts face down on a non-damaging surface such as a carpeted floor.
- 2. Arrange rope light brackets to align with screw holes in face. **NOTE:** The angle goes to inside of face kit frame. *Figure 1*
- Screw face parts together with light brackets in place using 8 (eight) #8 x 3/8" truss-head screws supplied. *Figure 1*
- 4. Install 22 clips in holes in light brackets. **NOTE:** Clips go to the outside of the brackets. *Figure 2*
- 5. Install the supplied #8 x 3/8" screws into the bracket at each corner of the face to eliminate gaps that may be present on the front and sides of the face where parts meet. Tighten slowly only until gap is eliminated. Do not over-tighten. The screw which is perpendicular to the face should always be installed first. *Figure 3*

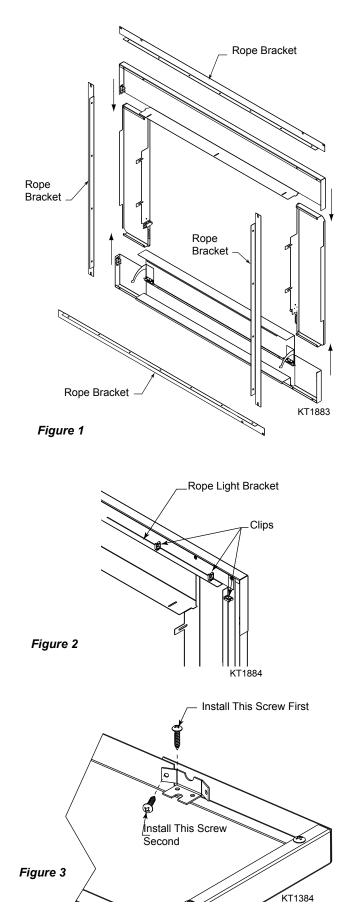

Monessen • AVFL42RLK Front Face Light Kit Instruction Manual • 20305987 Rev. A • 8/17

6. Insert rope light into clips, starting with nonelectrical end at bottom right corner and working clockwise around frame. **NOTE:** The connector end of the rope light will drape out of frame. *Figures 4 & 5*

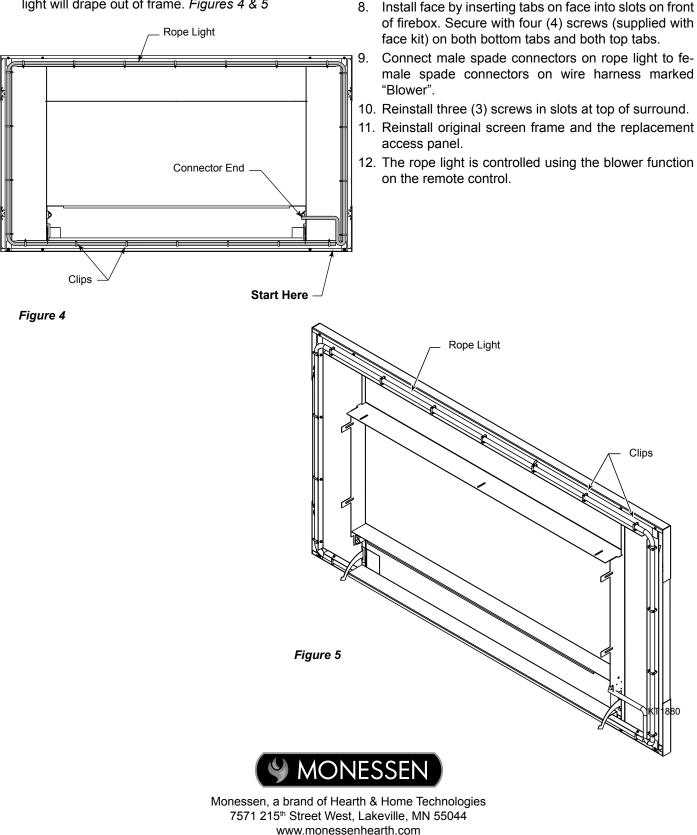

7. Remove screen frame and access panel from fire-

aside. Refer to Homeowner's Manual.

place. Remove three (3) screws at top of face, set