

INSTALLATION INSTRUCTIONS FOR THE 5-INCH HEATFLO EXTENSION KIT

[FOR USE WITH HEATFLO KITS LISTED IN TABLE 1]

KIT CONTENTS

- 4 ea. 5" Diameter Flex Vent, 60" Compressed (approx. 2.5:1 expansion ratio)
- 4 ea. Flex Coupler
- 24 ea. Sheetmetal Screws
- 1 ea. Instruction Sheet

HeatFlo Extension Kit		
Cat. No.	Model Number	Description
F4827	HTFLO-EK-5	Kit, 5" HeatFlo Ext. Kit, 45 DV Units
Compatible With		
Cat. No.	Model Number	Description
F3780	HTFLO-LIN60	Kit, HeatFlo Linear 60
F4408	HTFLO-LIN72	Kit, HeatFlo Linear 72
F4409	HTFLO-LIN84	Kit, HeatFlo Linear 84

Table 1

TOOLS / SUPPLIES REQUIRED

- 5/16 Nut Driver (recommended)
- Tin Snips (For cutting off excess flex)
- PPE: Safety Glasses, Cut Resistant Gloves and Sleeves

GENERAL INFORMATION

The HeatFlo Extension Kit is required when the distance from the bottom of the register to the top of the appliance exceeds 60" to 65". See Fire-place Framing Specifications in the Installation and Operation Manual.


READ ALL THE STEPS BEFORE STARTING THE INSTALLATION
THE FIREPLACE MUST BE OFF AND COLD BEFORE BEGINNING.

ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

If any of these parts are missing or damaged, contact your dealer or IHP.us.com for referral information.

WARNING: When handling flex pipe, be sure to wear proper PPE (cut resistant gloves and sleeves) to avoid injury.

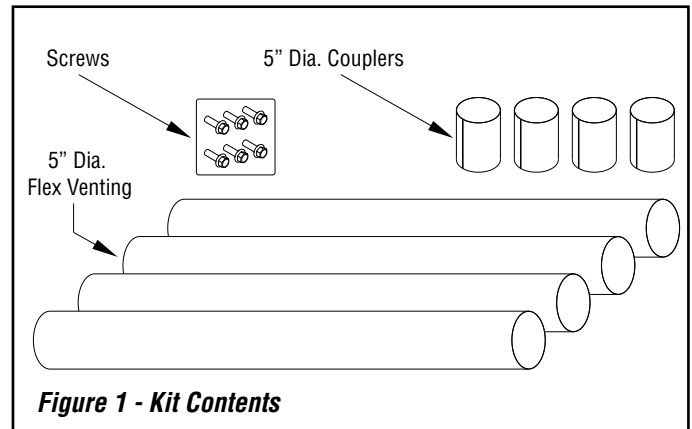

CAUTION: Flex pipe should be stretched out from its compressed state before installation. DO NOT over stretch the Flex. Make sure the flex pipe is slightly loose (but not sagging) when installed to allow for expansion and contraction. Flex pipe must not come in contact with combustible materials. Excessively loose flex could contact combustible materials and cause a fire hazard.

INSTALLATION INSTRUCTIONS

1. Refer to the HeatFlo installation instructions (901063-00) to install the HeatFlo kit.
2. Empty the contents from the Extension Kit carton.
3. Determine the length of flex pipe needed to reach the collars on the bottom of the HeatFlo register. Take the 60" compressed flex pipe and stretch it to the maximum length (approx a 2.5:1 expansion) and cut off the remaining flex that will not be used (if any).
4. If you are using a flex connector, insert the connector into one end of the flex pipe to the center of the connector. Use sheetmetal screws to secure the flex pipe to the connector.
NOTE: If the existing flex pipe from the HeatFlo Kit is not needed and you are only using the extension kit flex pipe, you will not need to use the flex couplers.
5. Insert the opposite end of the flex connector into the existing flex pipe from the HeatFlo Kit. Use sheetmetal screws to secure the flex pipe to the connector.
6. Refer to the HeatFlo Kit installation instructions (901063-00) to continue the installation of the extended flex pipe to the fireplace.

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.