

**FAST ACCESS QUICK RELEASE PINS
INSTALLATION GUIDE**

Installation

Using a 1/4" drill bit, drill a hole in the receiving material.

To set the effective/capture length of the pin, depress the button and slide the rubber coated washer onto the pin just past the retaining balls.

Slowly slide the pin through the material to be captured and into the 1/4" receiving hole allowing the washer to advance the up the shaft until the pin "clicks" or locks.

Retract the pin and measure the distance between the top of the washer the top of the pin.

Cut the clear spacer tubing to the length previously measured.


Remove the washer from the pin and slide the clear spacer in place and reinstall the washer.

Optional

Use the included zip tie to tether the pin to surrounding material.

Note

This may require drilling a 1/8" hole for the zip tie. (See image)

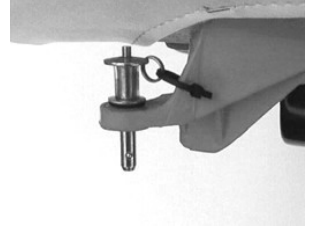

**FAST ACCESS QUICK RELEASE PINS
INSTALLATION GUIDE**

Installation

Using a 1/4" drill bit, drill a hole in the receiving material.

To set the effective/capture length of the pin, depress the button and slide the rubber coated washer onto the pin just past the retaining balls.

Slowly slide the pin through the material to be captured and into the 1/4" receiving hole allowing the washer to advance the up the shaft until the pin "clicks" or locks.

Retract the pin and measure the distance between the top of the washer the top of the pin.

Cut the clear spacer tubing to the length previously measured.

Remove the washer from the pin and slide the clear spacer in place and reinstall the washer.

Optional

Use the included zip tie to tether the pin to surrounding material.

Note

This may require drilling a 1/8" hole for the zip tie. (See image)

