

**! IMPORTANT:**  
Read ALL instructions carefully  
before beginning installation.


**BMW R nine T STORAGE POD  
INSTALLATION and OPERATION INSTRUCTIONS**

**Preparation:**

1. Remove rear seat by removing the bolt located underneath the seat.

**Installation:**


1. Engage tabs **A** on front of Storage POD under motorcycle seat **B**, then lower the rear of Storage POD, guiding the bolt through the hole in the frame as indicated below. Open POD Lid to access bolt head. See Lid opening instructions below. Fasten using nut and washer set **C** as shown. Do not over tighten. Close protective bolt head cap inside the Storage POD.

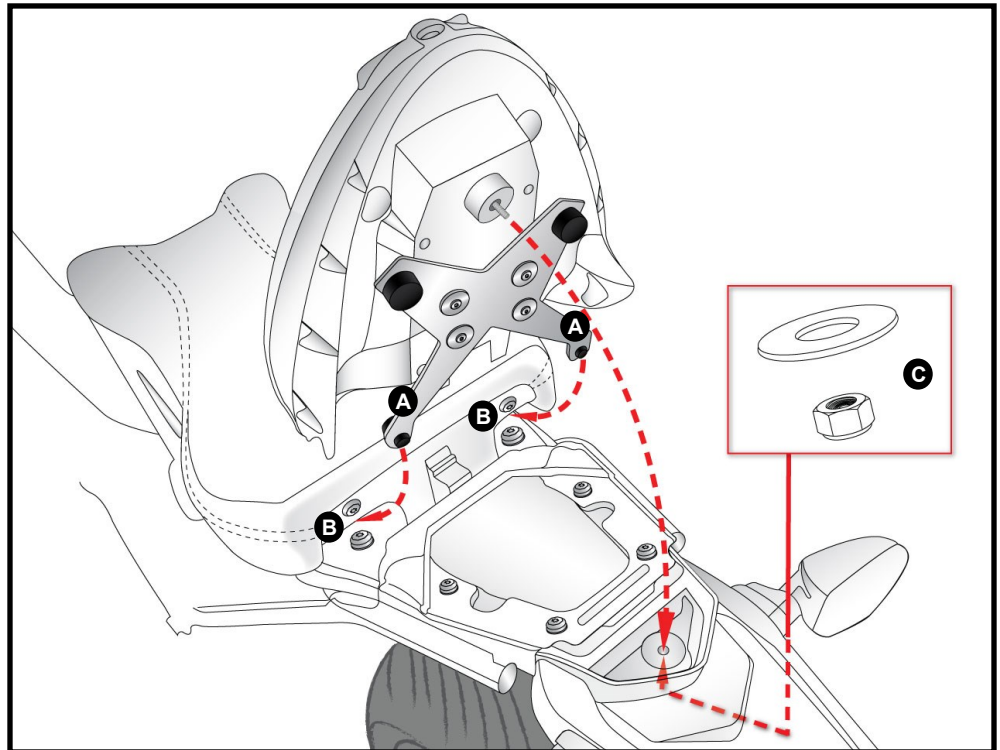

**Operation:**

**POD light and batteries:**

Two CR2430-3V batteries included. To activate POD light, remove clear plastic tab between batteries. To replace batteries, remove two Phillips screws **1**, remove cover and circuit board **2** then remove and replace batteries **3**, negative side up. Reassemble components as listed above in reverse order.

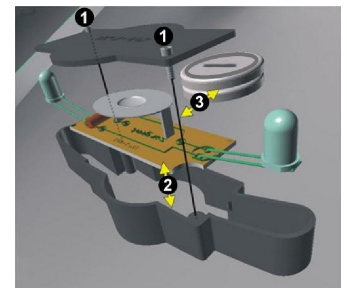

**IMPORTANT:**

Storage POD light is tilt activated. For long term storage, remove batteries or store POD in a horizontal position.

**Storage POD Latch and Lock:**



While standing at the rear of your motorcycle, slide the World Sport logo latch to the left to open your Storage POD. Locking the Storage POD will prevent the latch from opening the POD.