

INSTALLATION INSTRUCTIONS


! IMPORTANT:

Read the instructions in full prior to installation.

NOTE: Installation pictured is for general reference; your particular motorcycle's mirror mount system may vary.

INCLUDED IN THIS KIT:

- HEAT CONTROLLER MIRROR MOUNT BRACKET (B), QTY 1
- ADHESIVE VECRO PAD (D), QTY 1
- ADHESIVE WIRE CLIPS (F), QTY 2
- NYLON ZIP-TIES , QTY 3 (NOT PICTURED)

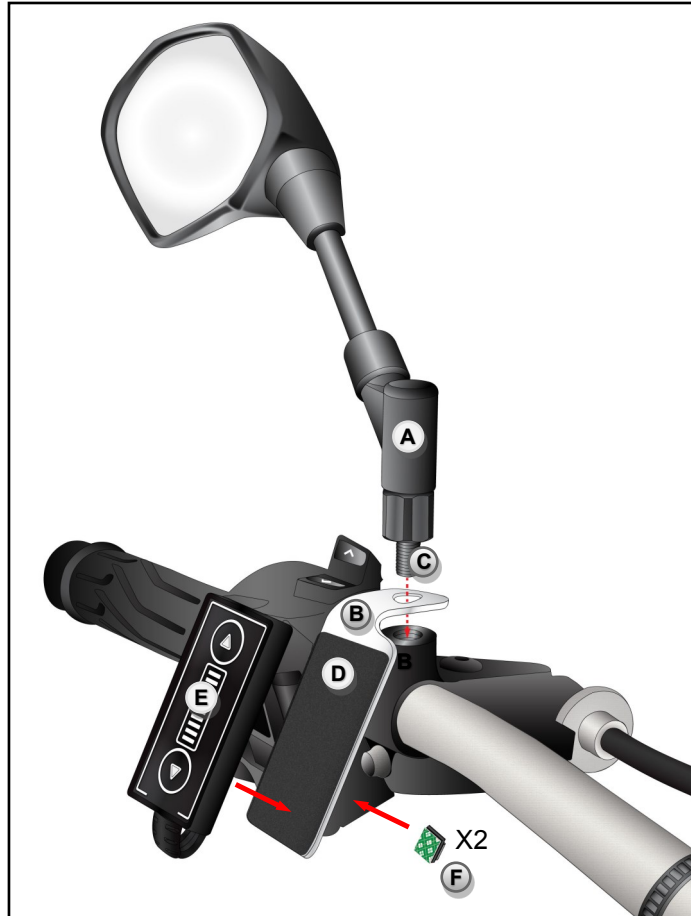

- STEP 1:** Remove upper mirror arm assembly section [A].
- STEP 2:** Install the Heat Controller Bracket [B] over threaded stud [C]
NOTE: The hole in the bracket is oval shaped to accommodate various common stud sizes (8mm- 10mm). Move the bracket forward or backward for the best fit.
- STEP 3:** Re-install and tightened the upper mirror arm assembly [A].
- STEP 4:** Test fit the Heat Controller Unit and wire leads to assuring that the wire routing is satisfactory.
- STEP 5:** Remove the backing on supplied pressure-sensitive adhesive (male hook) Velcro pad [D] and install onto the bracket. Before application, clean surface with rubbing alcohol.
- STEP 6:** Attach the Heat Controller Unit [E] to the bracket.
- Optional:** Apply pressure-senstive adhesive wire clips [F] to secure wire to the back of the bracket as needed. Before application, clean surface with rubbing alcohol. Finish installation by securing loose wire with zip-ties. Three are supplied.