

**⚠ IMPORTANT:**

*Read ALL instructions carefully before beginning installation.*

**Parts included:**

Panels x 2  
Clips x 6

**Tools Required:**

None

**IMPORTANT:**


Always work on a soft surface such as a cloth towel to prevent damage to the parts during installation.

**Installation:**

**Step 1 :** The OEM side panels are held in place by rubber grommets and are pressure fit. Remove each side panel from the motorcycle by gently pulling the front outward, then pulling the panel forward.

**Step 2 :** Align the Sargent panels to the OEM panel and apply the clips **(A)** evenly spaced as shown FIG 2.

**Step 3 :** Reinstall the panel assemblies back onto the motorcycle by reversing instructions in step one, pushing the panel's studs back into the pressure fit grommets.

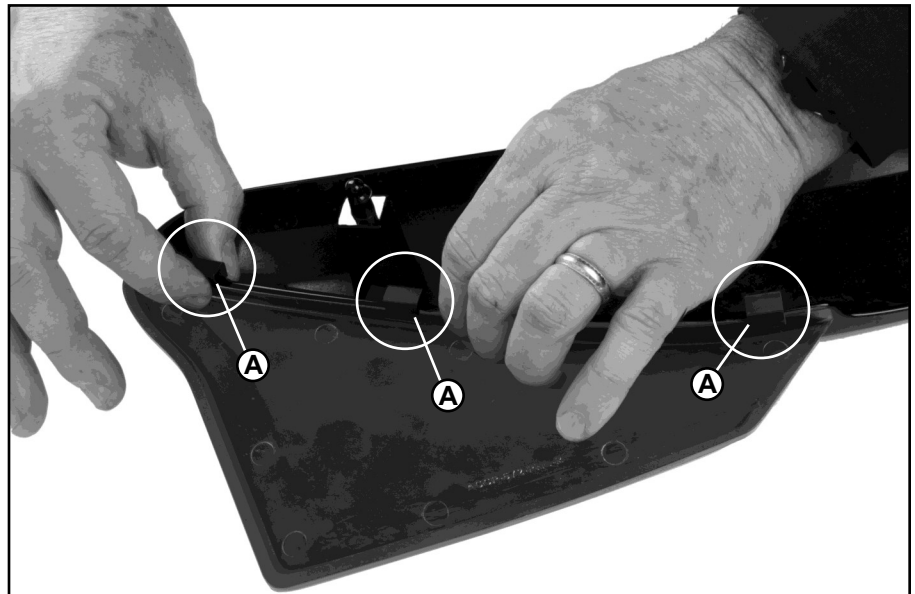

**Helpful Hint:**

The Splash Guards can be removed and adjusted if needed by gently opening the re-usable clips with a flat screwdriver and carefully prying them off.

**NOTE:**

Applying the clips may create a small abrasion to the inside (non visible side) of the OEM panel.