


**BMW2009 R1200RT LOW SUSPENSION  
OEM HARDWARE INSTALLATION  
TO ADAPT FOR  
SARGENT WS-550 AND WS-551**

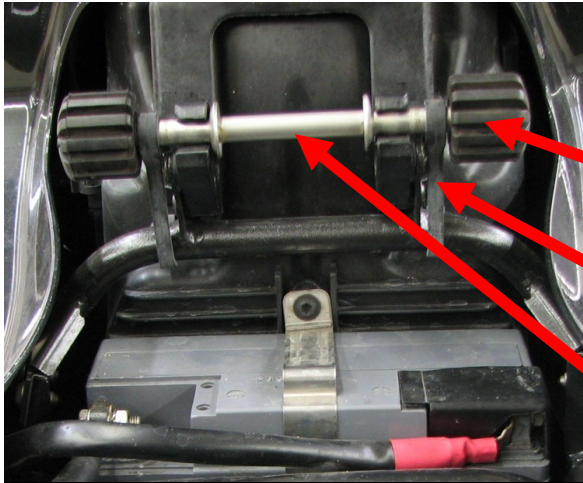


**P/N 16112323615 Bump stops Qty 2**

**P/N 52537686424 Tension straps Qty 2**

**P/N 52537686426 Support bar Qty 1**

Pictured above: 1. Slide the large opening in the tension straps over the ends of the new support bar. 2. Place the bump stops on the ends of the bar. 3. Place the bar in the holder on the machine as shown. 4. Stretch the small opening end of the tension strap under the tube frame and hook it on the small pin to hold it in place.

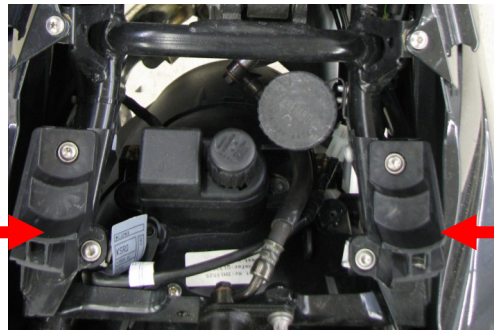


**P/N 52537688809 Left serrated adjustment Qty 1**

**P/N 52537688810 Right serrated adjustment Qty 1**

Pictured below: (Left side of machine shown here.) 5. Push 2 clip nuts onto frame plate so they are in alignment with the holes in plate. 6. Place left serrated adjustment over clip nuts and secure into place with 2 fillister head screws. 3. Repeat steps 5 and 6 for right side.

**P/N 06327651204 Fillister head screws Qty 4**

**P/N 51127070202 Clip nuts Qty 4**  
(Clip nuts are placed flat side up under serrated adjustments where fillister head screws are positioned.)

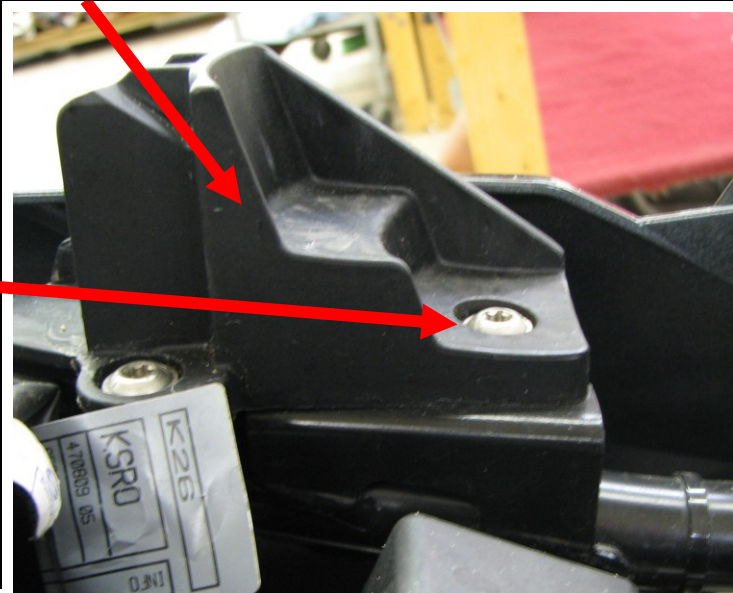

**SARGENT**  
CYCLE PRODUCTS