

# Kawasaki ZX14

## Modular Seat System

### Instructions

#### IMPORTANT:

Perform assembly on a soft surface to prevent damage.

#### Tools needed:

1. Phillips screw driver
2. 5mm allen wrench

#### Parts Included:

1. World Sport Seat unit x1
2. Storage Pod and/or Rear seat 1 ea
3. Cowl Transition Pad (T) x1
4. Rubber Standoffs (S) x2
5. 5mm Hex Bolts x 4 (already installed in Sargent Pan)

### Storage POD

#### Latch and Lock




While standing at the rear of your motorcycle, slide the World Sport logo latch to the left to open your Storage POD. Locking the Storage POD will prevent the latch from opening the POD.

#### POD light and batteries:


Two CR2430-3V batteries included. To activate POD light, remove clear plastic tab between batteries. To replace batteries, remove two phillips screws ①, remove cover and circuit board ② then remove and replace batteries ③.

Reassemble components as listed above in reverse order.

**IMPORTANT:** Storage POD light is tilt activated, for long term storage, remove batteries or store POD in a horizontal position.

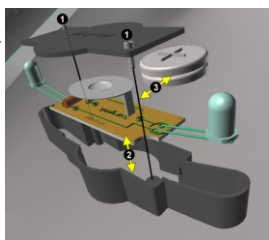

### Using the stock cowl:

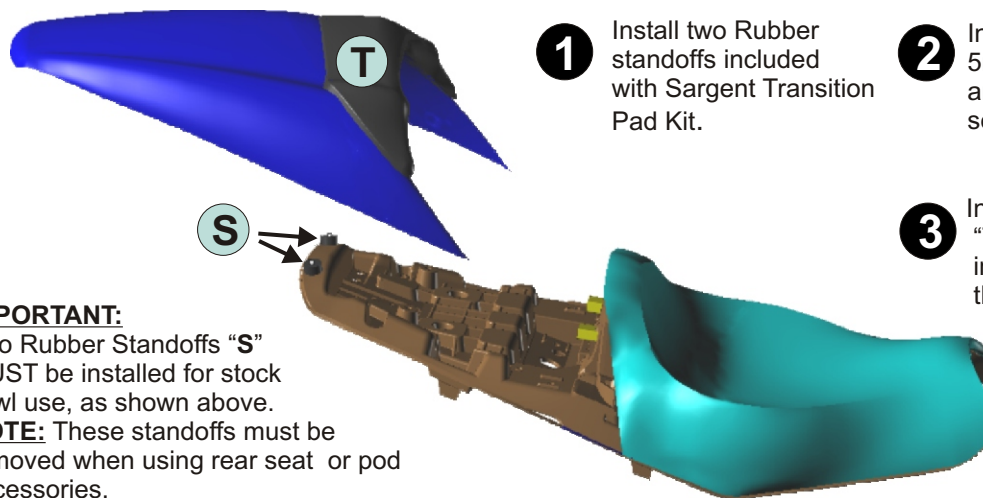


#### IMPORTANT:

Two Rubber Standoffs "S" MUST be installed for stock cowl use, as shown above.

**NOTE:** These standoffs must be removed when using rear seat or pod accessories.

- 1 Install two Rubber standoffs included with Sargent Transition Pad Kit.
- 2 Install cowl using four 5mm hex bolts (supplied and pre-installed in Sargent seat pan.
- 3 Install the Transition Pad "T" to the cowl per the instructions included with the Pad.

### Using the Rear Seat or Storage Pod:

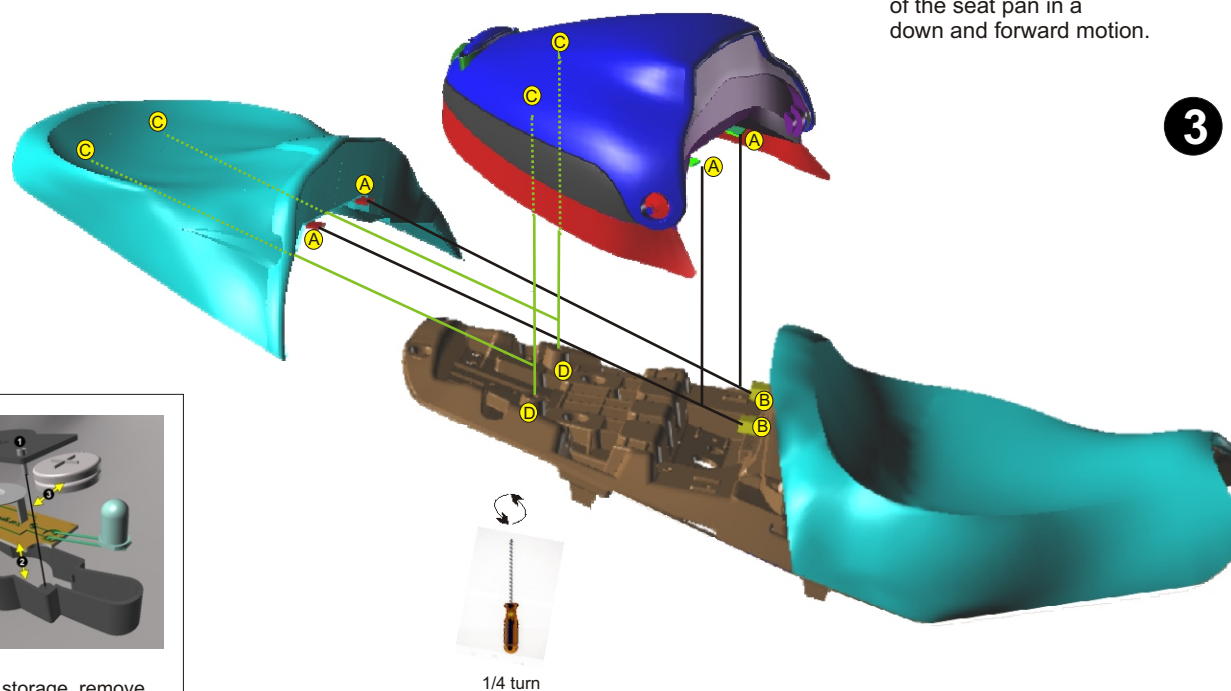

- 1 Choose your accessory: Insert tabs (A) of your accessory into slots (C) of the seat pan in a down and forward motion.
- 2 Lower rear of accessory into place. Gently tuck back edge of the front seat under the leading edge of the Storage POD as you install the POD for ease of installation.
- 3 Use a phillips screw driver to engage (2) locking stud (D) on the bottom of the seat pan, onto the accessory receivers (C) by turning the studs ONLY 1/4 turn. To insure you have properly secured your accessory, pull up at the rear of the accessory. It should remain firmly attached to the pan.

1-800-749-SEATS FAX 904-354-7979

WWW.SargentCycle.COM

**SARGENT**  
CYCLE PRODUCTS