

BMW TOPCASE PAD BR-2000

INSTALLATION INSTRUCTIONS AND TEMPLATE

FOR USE WITH ORIGINAL BMW 33-LITER TOP CASE (PART# 7160316731)

1. Cut the template out and position it on the Top Case's molded backrest feature.

2. Once you are certain that the template is centered, mark the hole locations on the Top Case. Note: It may be helpful to secure the template with tape before marking.

3. Drill three 1/4" holes at the specified locations.

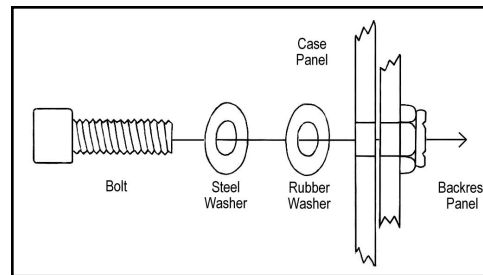


Figure 1

4. Install the fasteners provided through the Top Case's lid and into the threaded holes on the backrest. Use the washers provided in the order shown. (see fig.1).



Figure 2

5. Enjoy! Your new backrest is constructed of high-quality, outdoor-treated materials that are mildew resistant and U.V. stabilized. Clean with mild soap and a soft cloth.