

2010+ DUCATI MULTISTRADA WORLD SPORT MODULAR SEAT SYSTEM PART NUMBERS WS-614 AND WS-624 INSTALLATION INSTRUCTIONS

Thank you for purchasing a Sargent World Sport Performance Seat for your Multistrada. This product is manufactured to provide years of trouble free service with little to no maintenance. Before installing your seat, please take a few minutes to review the installation and care instructions below.

INSTALLATION:

- 1. Remove the stock seats per the OEM instructions.
- 2. Remove the OEM seat keeper pin/bolt and put it away for safe keeping. It is not used with the World Sport Performance Seat. NOTE: 2012+ models may have a shorter pin than pictured (see FIG 1)
- 3. Tuck the seat release cable back to insure that it does not interfere with the World Sport Performance Seat installation. (see FIG 2)
- 4. Install the front seat by grasping the front "ears" and engaging them onto the posts on the tank. As with the stock seat, this can be a little tricky but gets better with practice, so take your time and verify the connection. (see FIG 3)
- 5. Install the rear seat (or the optional Sargent Rear Cargo Carrier) by first checking to be sure that the front seat locking flange and locking hole are aligned. (see FIG 4) Slide the rear tab under the receiver first, then engage the lock pin (just as you would install the stock seat). With firm downward pressure, snap it in place to lock it.





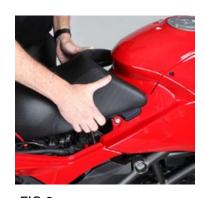








FIG 4.

FIG 1.

Finished installations shown above. Enjoy!

CARE INSTRUCTIONS:

Your World Sport Performance seat is made with high quality, UV-stable, mildew-resistant, outdoor-grade materials. These materials offer many years of superb performance with little to no special maintenance. Simply wash the seat with a mild detergent when you wash the bike. For other special upholstery options, such as leather, contact customer service or visit our website for details. **CAUTION:** Certain materials such as CarbonFX are subject to permanent shoe/boot scuffing. Appropriate care should be taken, especially during product trial period.